

## METAL INLAY CABLE TIES

# 1

- Identify items to be tied/secured



### TOOLS / CHEMICALS



R2109 / R2112  
Metal Inlay Cable Ties Black



R2111 / R2113  
Metal Inlay Cable Ties white



Nitrile Gloves




R3122  
Comprehensive Pliers Tools Set



R1179  
Tools Trolley

# 2

- Hold items in position while wrapping Metal Inlay Cable Tie around

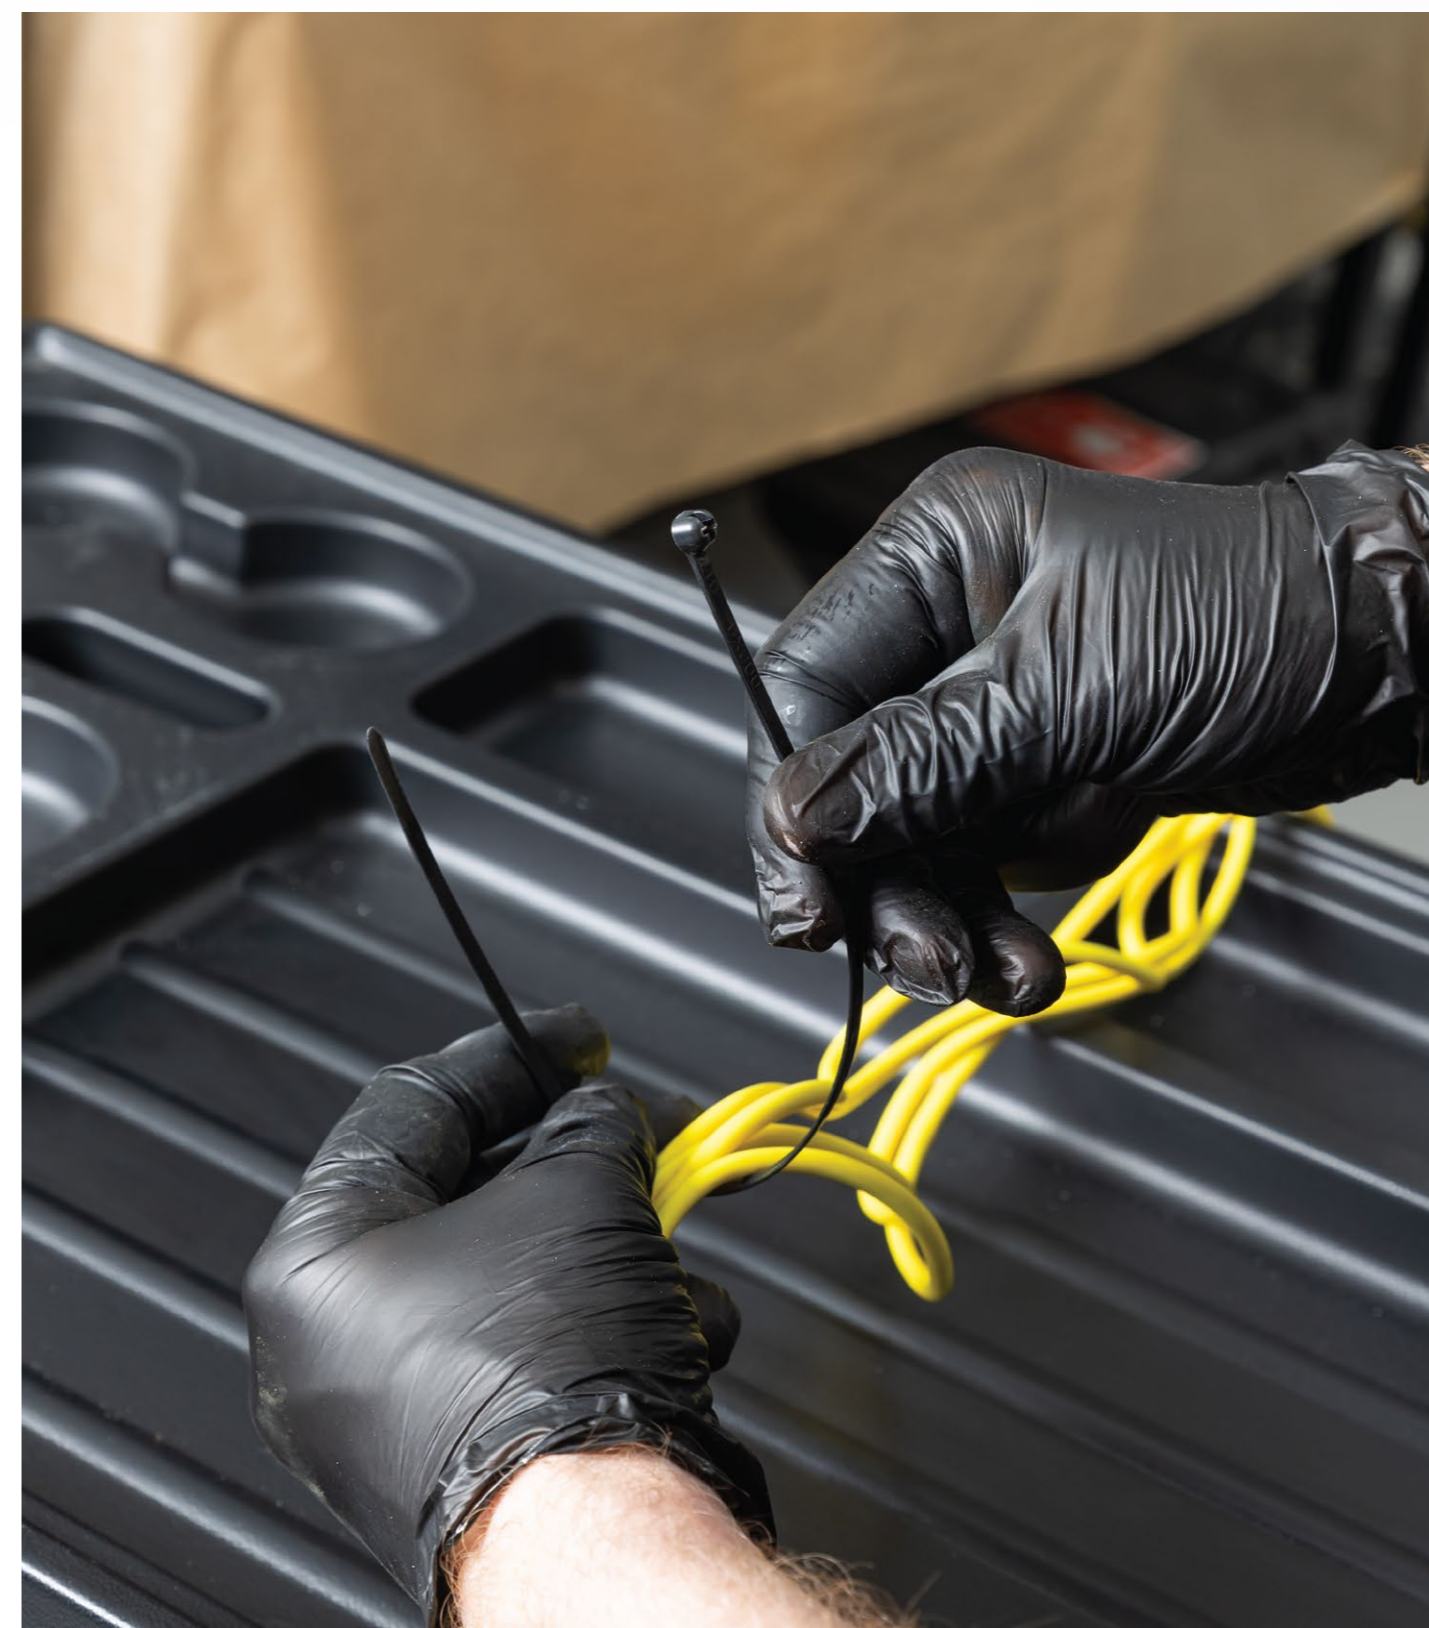

# 3

- Insert end of Metal Inlay Cable Tie into head and pull until secure



# 4

- Remove excess material using side cutters



**TIME: 5MINS**