

POLISHING AND PAINT CORRECTION PROCESS

1

Preparation

- Put all the necessary Equipment/tools in R1149 Detailing Trolley. It is movable so it will help you to reach all the equipment/tools that you need in Detailing/Polishing process.

2

Removal of contaminants on the panel

- Use R1837 Silky Smooth Clay Bar with the help of R1839 Clay Lube to eradicate the contaminants/dust particle on the preferred painted vehicle panel that needs to be paint corrected.
- After decontaminating the painted panel, Use R1806 Polish and Final Microfiber Cloth to dry and remove the excess contaminants on the painted panel.

3

Masking Tape Application

- Use R1014 Masking Tape (1 inch) in between the corners to prevent burning/damaging the paint when doing paint correction/polishing.

4

Cutting Process

- After Masking and securing the corners/in between, start the cutting process using R1822 Superior Cut with the help of R1823 Superior Cutting Pad. Use preferred buffing machine (dual action or rotary machine). Apply 5 pea size drop of R1822 Superior Cut Compound on R1823 Superior Cutting Pad and firmed/lubricate the pad. Do the process in Criss cross motion.
- Use R1806 Polish and Final Touch Microfiber Cloth or R1807 Fluffy Waxing Microfiber Cloth in removal of R1822 Superior Cut.
- Use R1141 Hybrid Color Match and UV Light to make sure that the painted surface is equally buffed/polish.

Finishing process

- After Cutting Process, use R1826 Ultimate Finish Compound with the help of R1827 Ultimate Finishing Pad. Apply 5-6 pea drops of R1826 Ultimate Finish Compound to lubricate R1827 Ultimate Finishing Pad. Do the process in Criss cross motion pattern.
- When its done, use R1806 Polish and Final Touch Microfiber Cloth or R1807 Fluffy Waxing Microfiber Cloth in removal of R1826 Ultimate Finishing Compound.
- Use R1141 Hybrid Color and UV Light to make sure that the painted panel is properly Buffed/Polished.

Waxing




- Using R1828 Exceptional Wax with the help of R1829 Exceptional Wax Pad. Apply 5 pea size drops of R1828 Exceptional Wax on R1829 Exceptional Wax Pad. Start to apply it in Criss cross motion with the help of buffing machine.
- After Applying R1828 Exceptional Wax, Use R1806 Polish and Final Microfiber Cloth to remove excess compound on the painted panel.
- Use R1141 Hybrid Color Match and UV Light to make sure that the painted panel is properly buffed/polished.

One Step Polish process (optional)

- After decontamination process by using R1837 Silky smooth clay bar with the help of R1839 Clay Lube in preferred painted panel. Apply R1014 Masking tape (1 inch) in between the corners.
- Use R1824 One Step Polish compound with the help of R1825 One Step Polishing Pad. Apply 5 pea size drop of R1824 One Step Polish compound lubricating the R1825 One Step Polishing pad. Once the R1825 is lubricated, Start the paint correction process.
- Use R1806 Final and Final Microfiber Cloth to remove excess Compound in the painted panel.
- Use R1141 Color Match and UV Light to ensure that the painted panel is properly buffed/polished.

Valeting

- After vehicle paint correction/polishing is done. Use R1016 Car Cover (medium) or R1017 Car Cover (Large) to prevent scratches or damaged vehicle paint panel during valeting

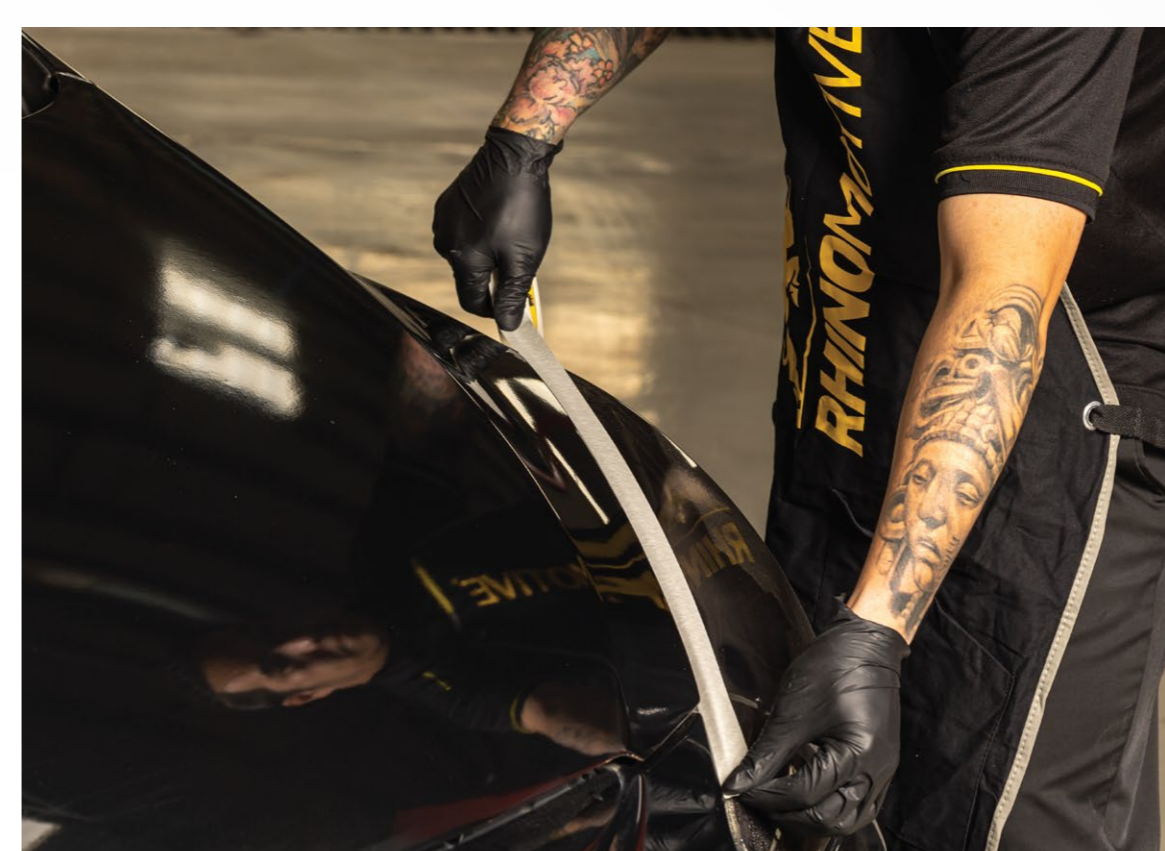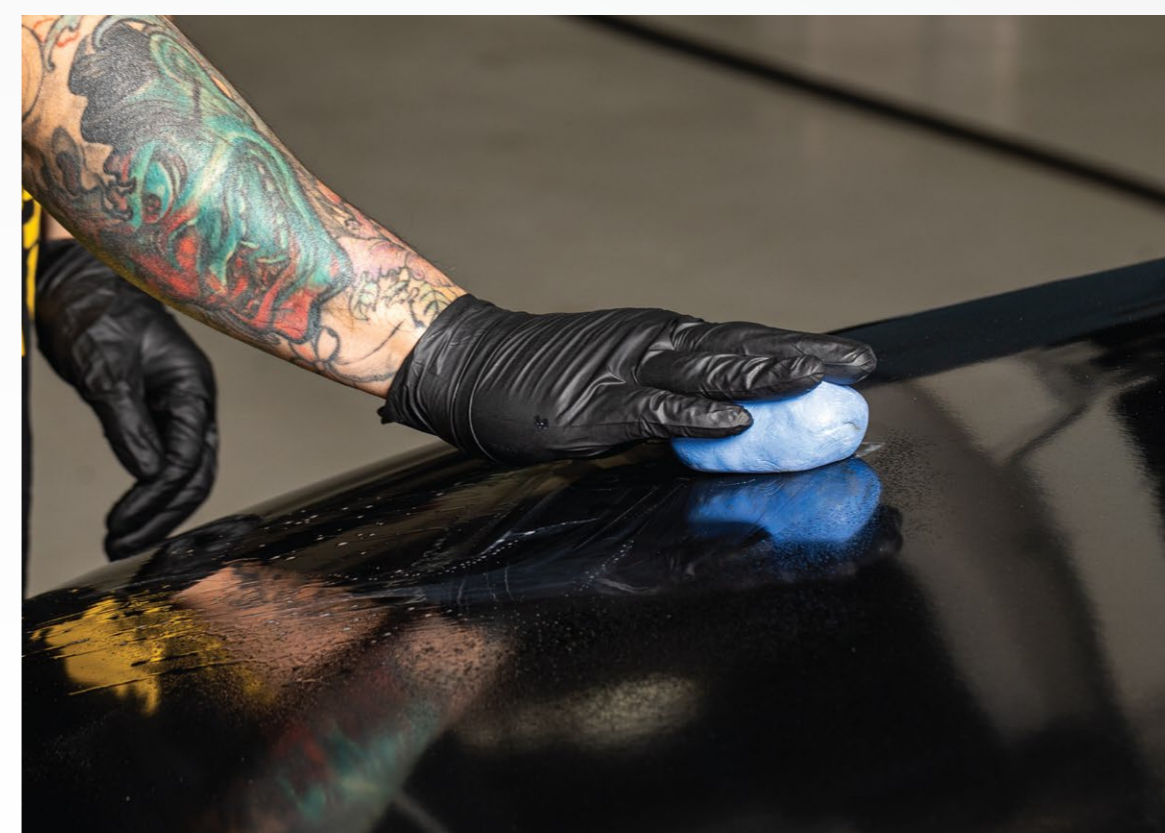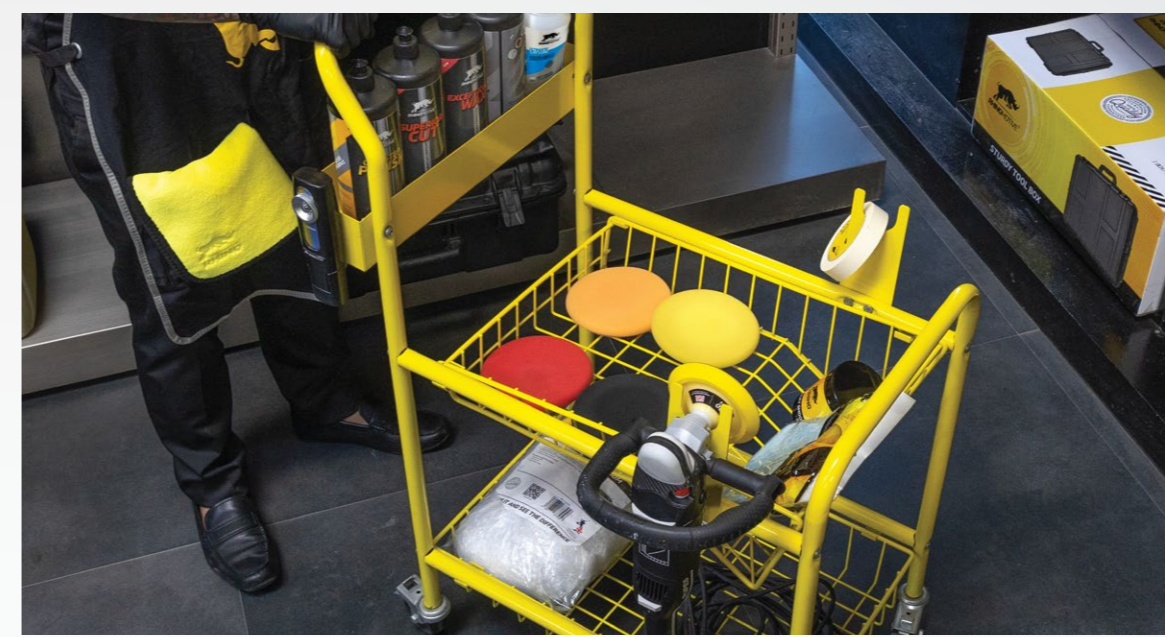

TOOLS / CHEMICALS



R1824 One Step Polish 1L



R1822 Superior Cut 1L



R1823 Superior Cutting Pad 150mm



R1826 Ultimate Finish 1L



R1825 One Step Polishing Pad 150mm



R1828 Exceptional Wax



R1829 Exceptional Waxing pad



R1827 Ultimate Finishing Pad 150mm



R1839, R1839_BOTTLE Ultimate Clay Lube 19L



R1113 Back-Up Pad Polishing



R1805 Fluffy Waxing Microfiber



R1837 Silky Smooth Clay Bar



R1326 Polish and Detailing Apron



R1014 Masking Tape 1inch



R1141 Hybrid Color Match And UV Light



R1806 Polish And Final Touch Microfiber Cloth



R1016/R1017 Car Cover



R1303 Safety Glasses



R1149 Detailing Trolley



R1301 Particulate Dust Mask



Nitrile Gloves