

DETAILING TROLLEY

PN: R1149













IMPORTANT WARNING!

ADULT ASSEMBLY REQUIRED

- Assembly kit contains small parts that can present choking hazards for children.
- Assembly kit contains small parts with sharp points.
- Assembly kit contains small parts with sharp edges.
- Components are packed in plastic bags that could present a suffocation hazard. Dispose of plastic bags as soon as unpacked.

1. APLICATION/USE

Used in body shops, detailing centres, PDI, etc. to store and carry RHINOMOTIVE chemicals/polishes and for safe hanging of polishing machines.

2. TECHNICAL SPECIFICATIONS

• Material: Steel

• Body frame: 25 mm x 1.2 mm


• Trolley Size: 78cm (L) x 45cm (W) x 110cm (H)

3. PARTS LIST

NO.	DESCRIPTION	QUANTITY
1	Bolt (m8x40)	10
2	Countersunk bolt (m8x40)	4
3	Nut (m8)	6
4	Hanger for Polishing Machine	2
5	Wheel with Brake	2
6	Wheel	2
7	Support Bar	1
8	Upper Left Bar	1
9	Upper Right Bar	1
10	Bottom Bar	2
11	Handlebar	1
12	Box Tray	1
13	Bottom Net Shelf	1
14	Upper Net Shelf	1

2/5 www.rhinomotive.com



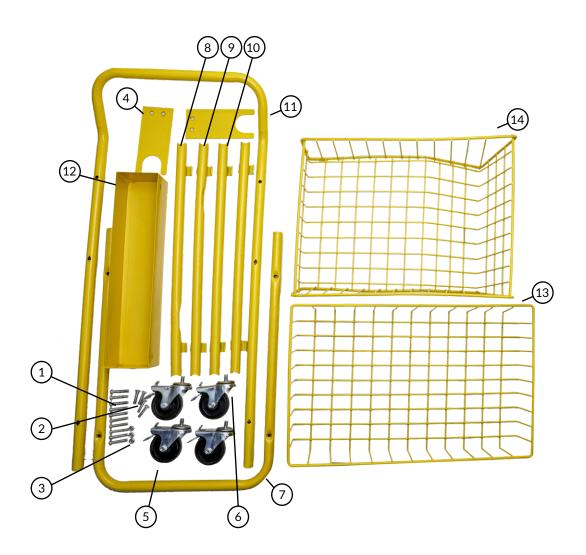

4. ASSEMBLY INSTRUCTIONS



4.1. Insert the castor into the U Shape Bar

www.rhinomotive.com 3/5





4.2. Insert the caster into the Handlebar



4.3. Use Bolt (1) to attach the Handlebar onto the Horizontal Bar (9) with hooks on the lower side



4.4. Use Bolt (1) to attach the Handlebar onto the Horizontal Bar (9) with hooks on the lower side



4.5. Use Bolt (1) to attach the Handlebar onto the Horizontal Bar (9) with hooks on the lower side

4/5 www.rhinomotive.com





4.6. Use Parts (2) (3) (4) to install the holder for polishing machines



4.7. Install the Bottom Net Basket (13)



4.8. Install the Upper Net Basket (14)



4.9. Use Bolt (1) to install the Storage Box













