

SMALL AREA PAINT RECTIFICATION PROCESS





CLEAN AND MASK

- Degrease the whole working area using VOC degreaser that is decanted into R1844 Detailing Pump spray Bottle and R1818 Surface-**Preparation Degreasing Wipes**
- Mask the edges of the surfaces to prevent cutting through

DEFECT REMOVAL

- DA sanding with a 75mm P1000 foam disc, Use a soft interfaces pad.
- Refine the P1000 sand scratches by dry DA sanding with a 75mm P1500 foam disc. Use a soft interfaces pad. • Spray light mist water to lubricate the P1500 foam abrasive disc. To Avoid clogging Spend additional time on this step to ensure removal of P1000 sand scratches. • Wipe the surface clean Using **R1804 Microfibre Detailing Cloth**

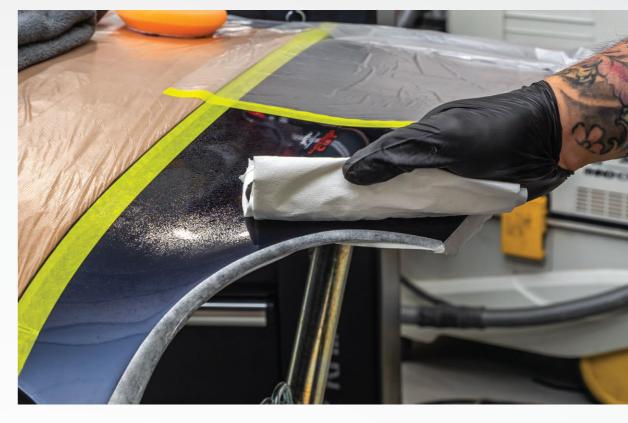

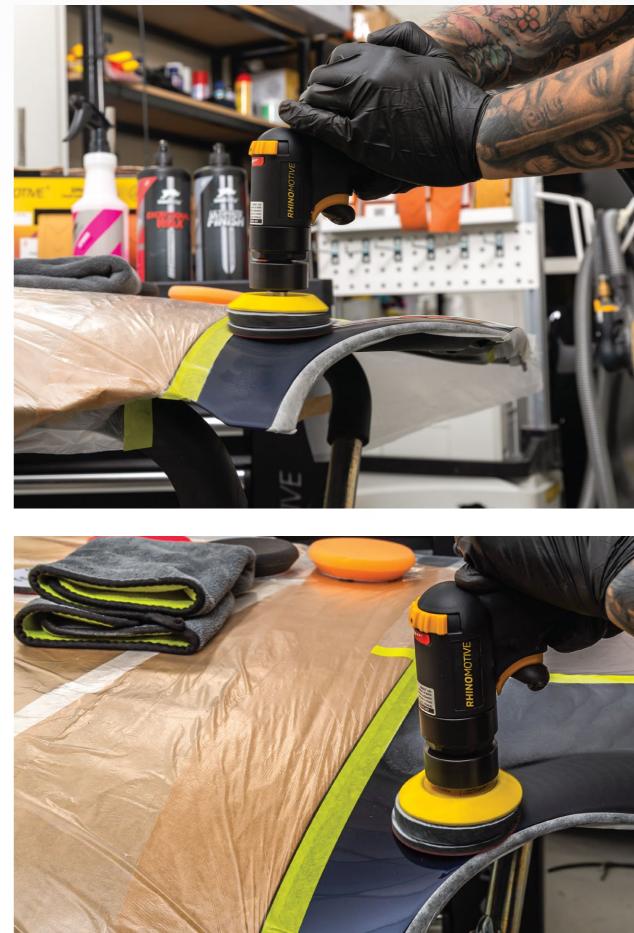





R1844 R1822 Superior Cut 1L Detailing Pump spray Bottle



SCRATCH REFINEMENT

- Refine the P1500 sand scratches by dry DA sanding with a 75mm P3000 foam disc. Use a soft interfaces pad.
- Spray light mist water to lubricate the P3000 foam abrasive disc. To Avoid clogging
- Spend additional time on this step to ensure removal of P1500 sand scratches.
- Wipe the surface clean.

CUT COMPOUND

Compound the repair area with R1122 Mini Air Polisher.

Use R1831 One Step Polishing Pad 100mm with R1822 Superior Cut 1L.

Apply 4-6 pea size drops of compound on pad and spread compound on surface. Polish in horizontal and vertical cross patch motion to have even breakdown of compound. Wipe surface clean and inspect using **R1806 Polish and Final touch Microfibre Cloth**



R1818 Surface-Preparation Degreasing Wipes

R1854 Ultimate Finishing pad 100mm





R1804 Detailing Microfibre Cloth - Yellow

R1806 Polish and Final touch Microfibre Cloth



R1122 Mini Air Polishe

Exceptional Wax 1L





One Step Polishing Pad 100mm

Exceptional Waxing Pad 150mm





R2204 Speed Gloss 500ml

R1141 100mm Ultimate Finish pad











POLISH FINISH

- Polish the repair area with R1122 Mini Air Polisher.
- Use R1854 Ultimate Finish Pad 100mm with R1826 Ultimate Finish Polish 1L.
- Apply 4-6 pea size drops of compound on pad and spread polish on surface. Polish in horizontal and vertical cross patch motion to have even breakdown of polish.
- Wipe surface clean and inspect using **R1806 Polish and Final touch Microfibre Cloth**


WAX APPLICATON

- Apply R1828 Exceptional Wax 1L with R1829 **Exceptional Waxing Pad 150mm.**
- Apply 4-6 pea size drops of compound on pad and spread polish on surface. Polish in horizontal and vertical cross patch motion to have even breakdown of polish.
- Wipe surface clean and inspect using **R1806 Polish and Final touch Microfibre Cloth**

FINAL DETAIL

• Use R1141 Hybrid Colour Match and UV Curing Light and inspect the repair area.



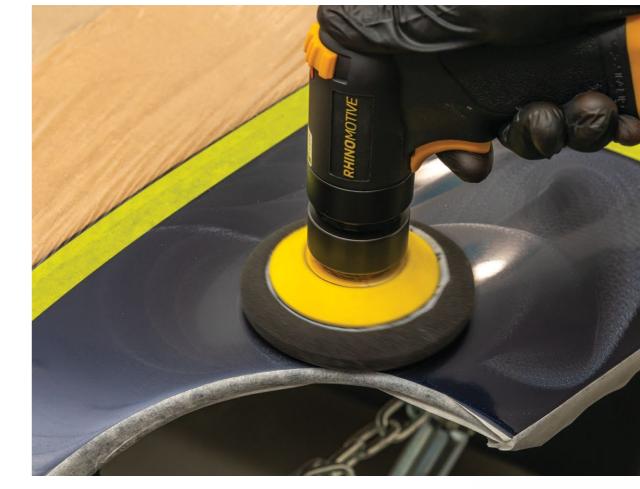









R1826 Ultimate Finish Polish 1L

Paint Thickness Gauge











R1311-R1315 Reusable Coverall

R1326 Polish Apron





Nitrile Gloves

R1301 Particulate Dust Mask



 Apply R2204 Speed Gloss with R1806 Polish and **Final touch Microfibre Cloth**





