

## ENGINE OIL FLUSH

1

- Unlatch the bonnet by using the lever inside the Vehicle.




2

- Open the bonnet and use the stay to support the bonnet, remove oil filler cap.



3

- Remove sump plug to drain the engine oil, once engine oil is drained refit the sump plug.

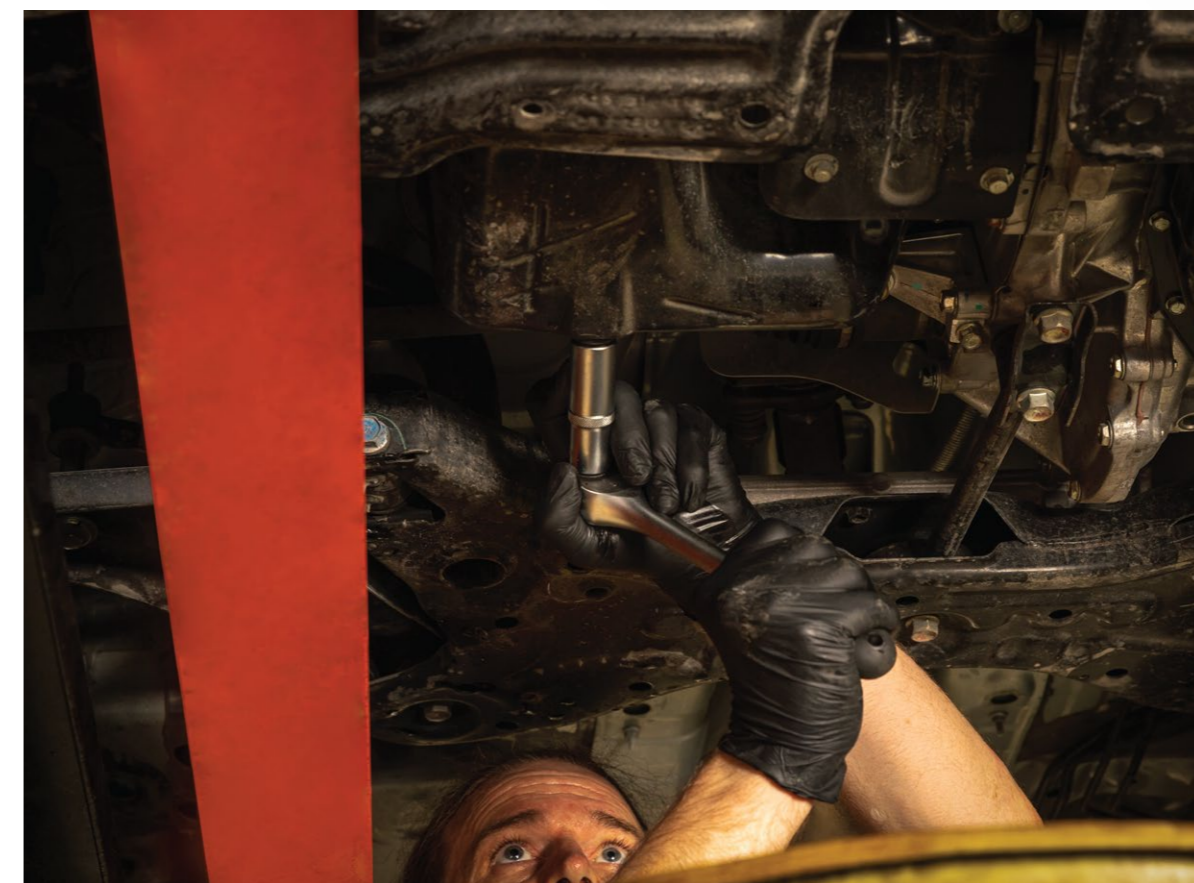

4

- Shake the container before adding the **R1230 Engine Oil Flush** into the oil filler point. Refit the oil filler cap.



5

- Run the engine for 10 to 15 minutes.




6

- Remove the sump plug to drain the **R1230 Engine Oil Flush**, remove the oil filter and replace with new filter, replace the washer on the sump plug, refit sump plug as per OEM Specification.



7

- Lower the vehicle, and fill the engine oil to just below the correct indicator line.
- Add **R1222 Oil Booster**, and refit the oil filler cap, start the engine run for 1-2 minutes.
- Switch off the engine, leave to stand for 1 to 2 minute then recheck the engine oil level, top up if required.

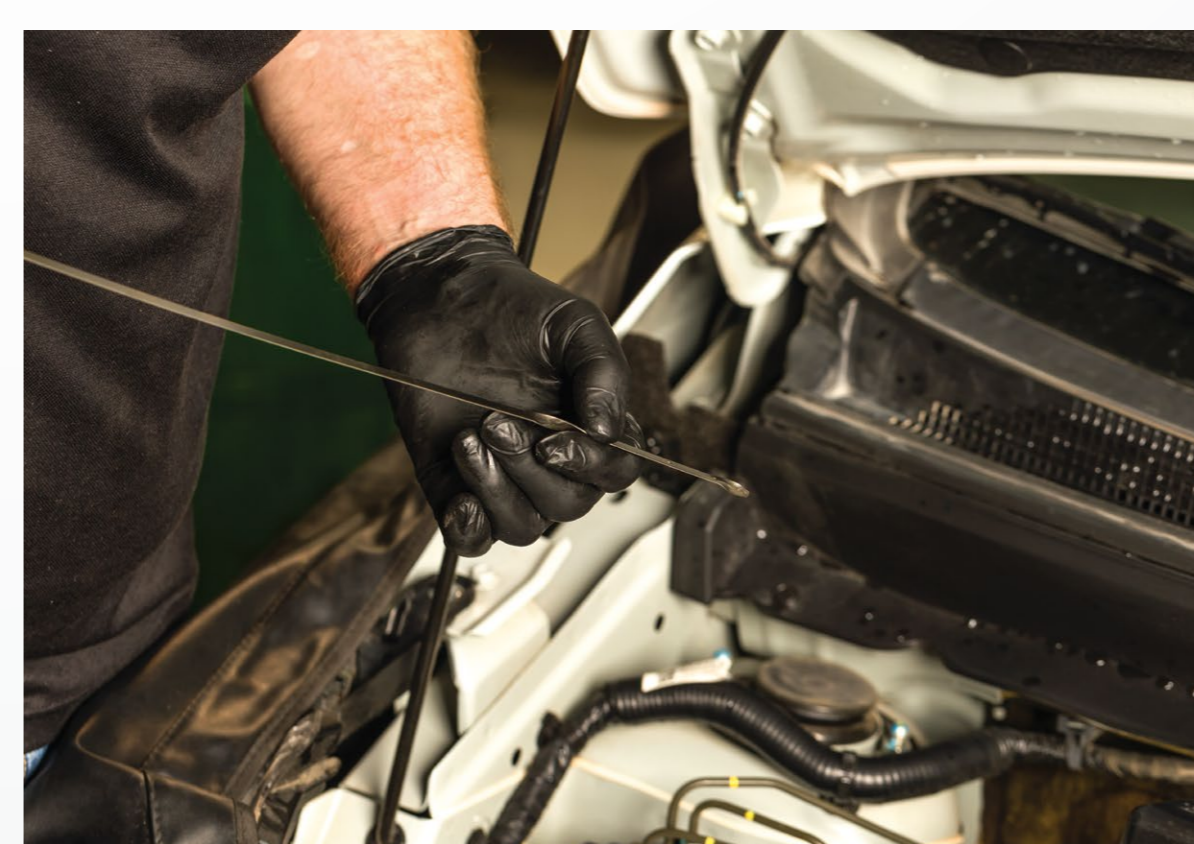

### TOOLS / CHEMICALS




R1230 / R1231  
Engine Oil Flush




R1222  
Oil Booster



R1179  
Tools Trolley

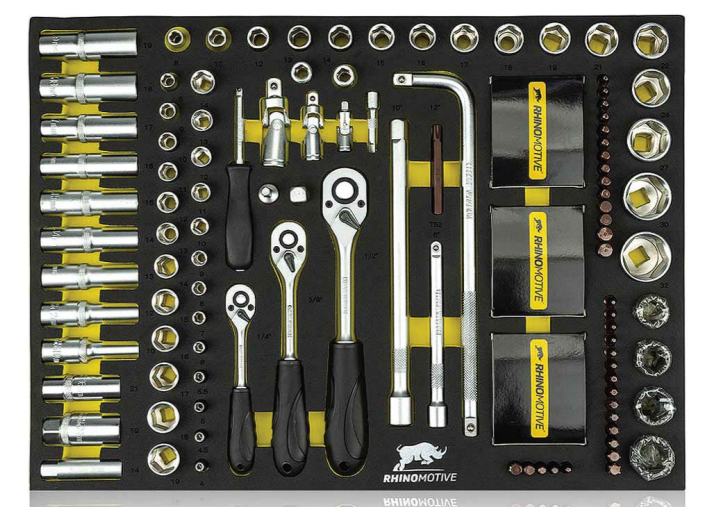

R3125  
Socket Tool Set - 131 PCS

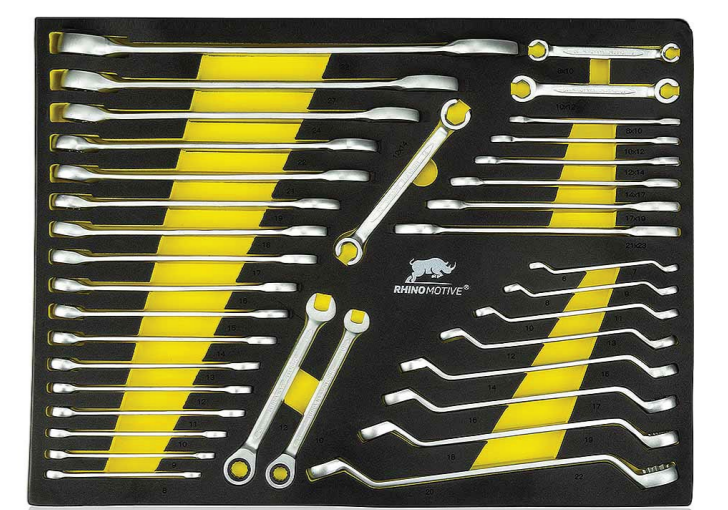

R3126  
Combination Spanner Tool Set - 36 PCS




R3128  
Auto Tool Set - 45 PCS



R1229  
Oil Absorbing wipes



Nitrile Gloves

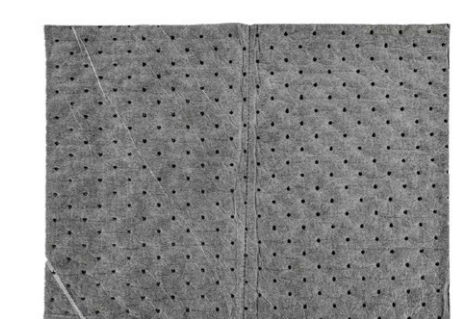

R1228  
Absorbent Pads



R1225  
Hand Cleaning Paste

**TIME: 30MINS**